

Instruction Sheet for Easy-to-Make Cardboard Folding Easel




Make from stiff cardboard or 2mm MDF board.

One base piece 15" x 13"

Two support pieces 13" x 3¾"

Eight ridge pieces 8½" x 1"

(Fix the ridge pieces in position with glue and/or masking tape)

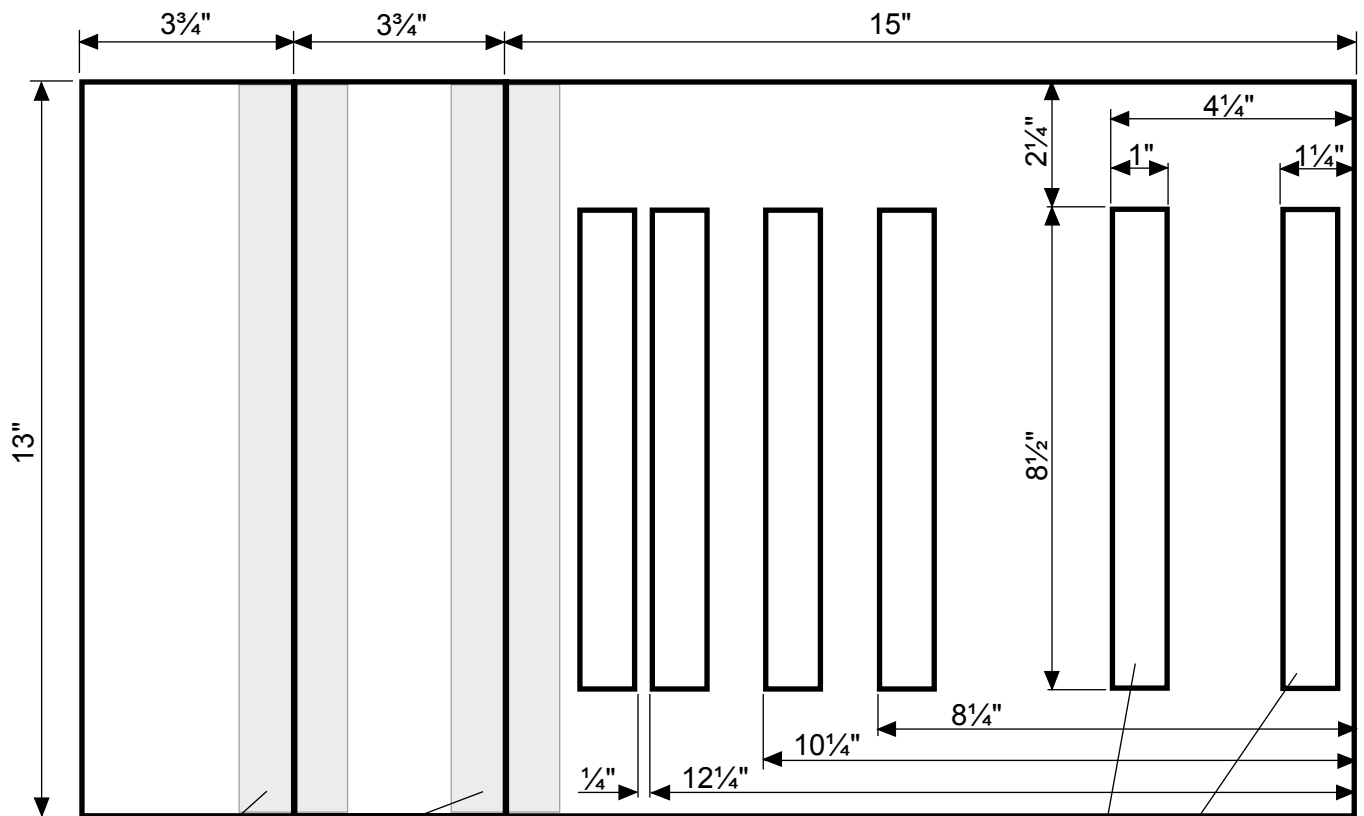

Use masking or duct tape for hinges, apply on top face first, while flat.

Double height ridge pieces



Apply tape for hinges, on bottom face while folded



Showing Easel in use with watercolour-paper board supported in medium tilt position.

